

Maintenance

It is important to keep the Barbie Keyboard as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Keep the Barbie Keyboard away from direct sunlight or sources of excessive heat.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the toy is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Protect your furniture when placing the unit on a natural oil or lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**.

Please also visit our website: **www.toptoysonline.com**.

Troubleshooting

If improper operation occurs, press the reset button located on the front of the unit.

If the toy still does not play, check the batteries. They are probably weak and need to be replaced with new batteries.

If the unit still does not work after changing the batteries, make sure you have installed them properly, with the + and - polarities matching the diagram printed inside the battery compartment.

If there is a distorted or fuzzy sound, the batteries may be weak. Replace with new batteries.

If problems persist, **do not attempt to repair the toy yourself**. See the warranty for factory service information.

"SHE WILL (BE LOVED)" Courtesy of Careers-BMG Music Publishing, Inc. (BMI)/BMG Songs Inc. (ASCAP) Under license from BMG Film & TV Music.

"OUTRAGEOUS" Courtesy of Zomba Songs Inc. (BMI), Under License from BMG Film & TV Music.

"OOPSI... I DID IT AGAIN" Courtesy of Zomba Enterprises Inc. (ASCAP) o/b/o Zomba Music Publishers Ltd. Under License from BMG Film & TV Music.

WARNING: It is a violation of Federal Copyright Law to synchronize any music from these cartridges with video tape or film, to copy any music from these cartridges onto phonorecords, or to print material from these cartridges in the form of standard music notation and/or words without the express written permission of the Copyright owners.

Limited 90 Day Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$9.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$9.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:
Consumer Repair Department
KIDdesigns, Inc.
1330 Goodyear Dr.
El Paso, TX 79936-6420

BARBIE and associated trademarks and trade dress are owned by, and used under license from Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

 
Copyright Together Again Video Productions, Inc. Kidsongs® is a trademark of Together Again Video Productions, Inc.

Manufactured and Distributed by KIDdesigns, Inc.
Rahway, NJ 07065-5024

Model BE-748

Barbie™

"Jam With Me"
Electronic Keyboard

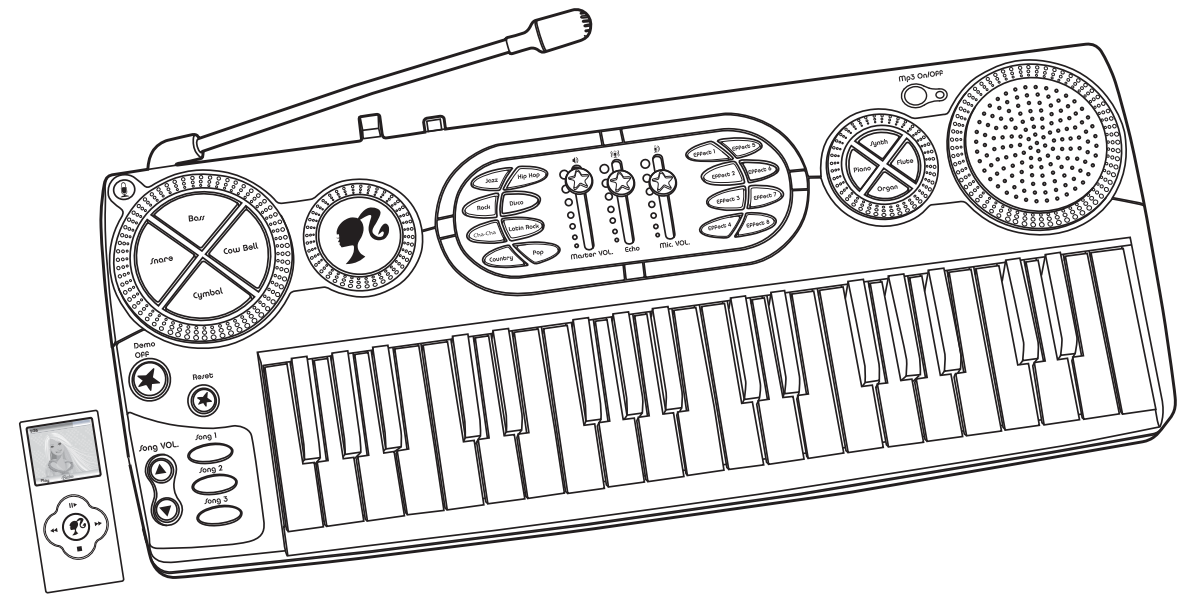

Important Message to Consumers

Thank you for purchasing one of Barbie™'s top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Barbie™ products are designed for.

Keep these instructions for future reference as they contain important information.

Installing the Batteries

ATTENTION: Batteries should only be installed by an adult.

The unit should come with 4 "AA" (R6) batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries, follow these instructions:


1. The battery compartment is located on the back side of the toy. Use a Phillips screwdriver to open the battery compartment door.
2. Install 4 "AA" (R6) size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw.

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time (approximately 30 days or more) to prevent leakage or damage to the unit.
- Rechargeable batteries should only be charged under adult supervision.


Remove Demo Tab

The Barbie™ Keyboard has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly.

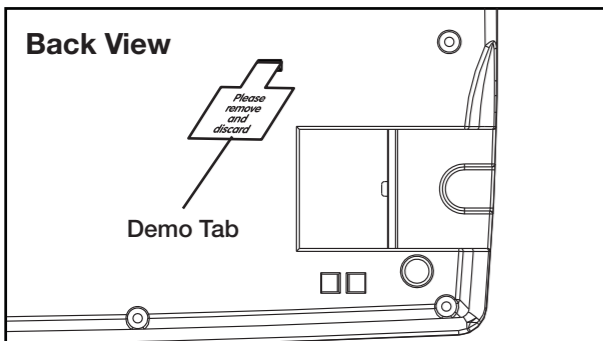

Adjusting the Volume

Use the **10 Master Volume Fader**, located on the middle of the unit, to adjust the overall volume.

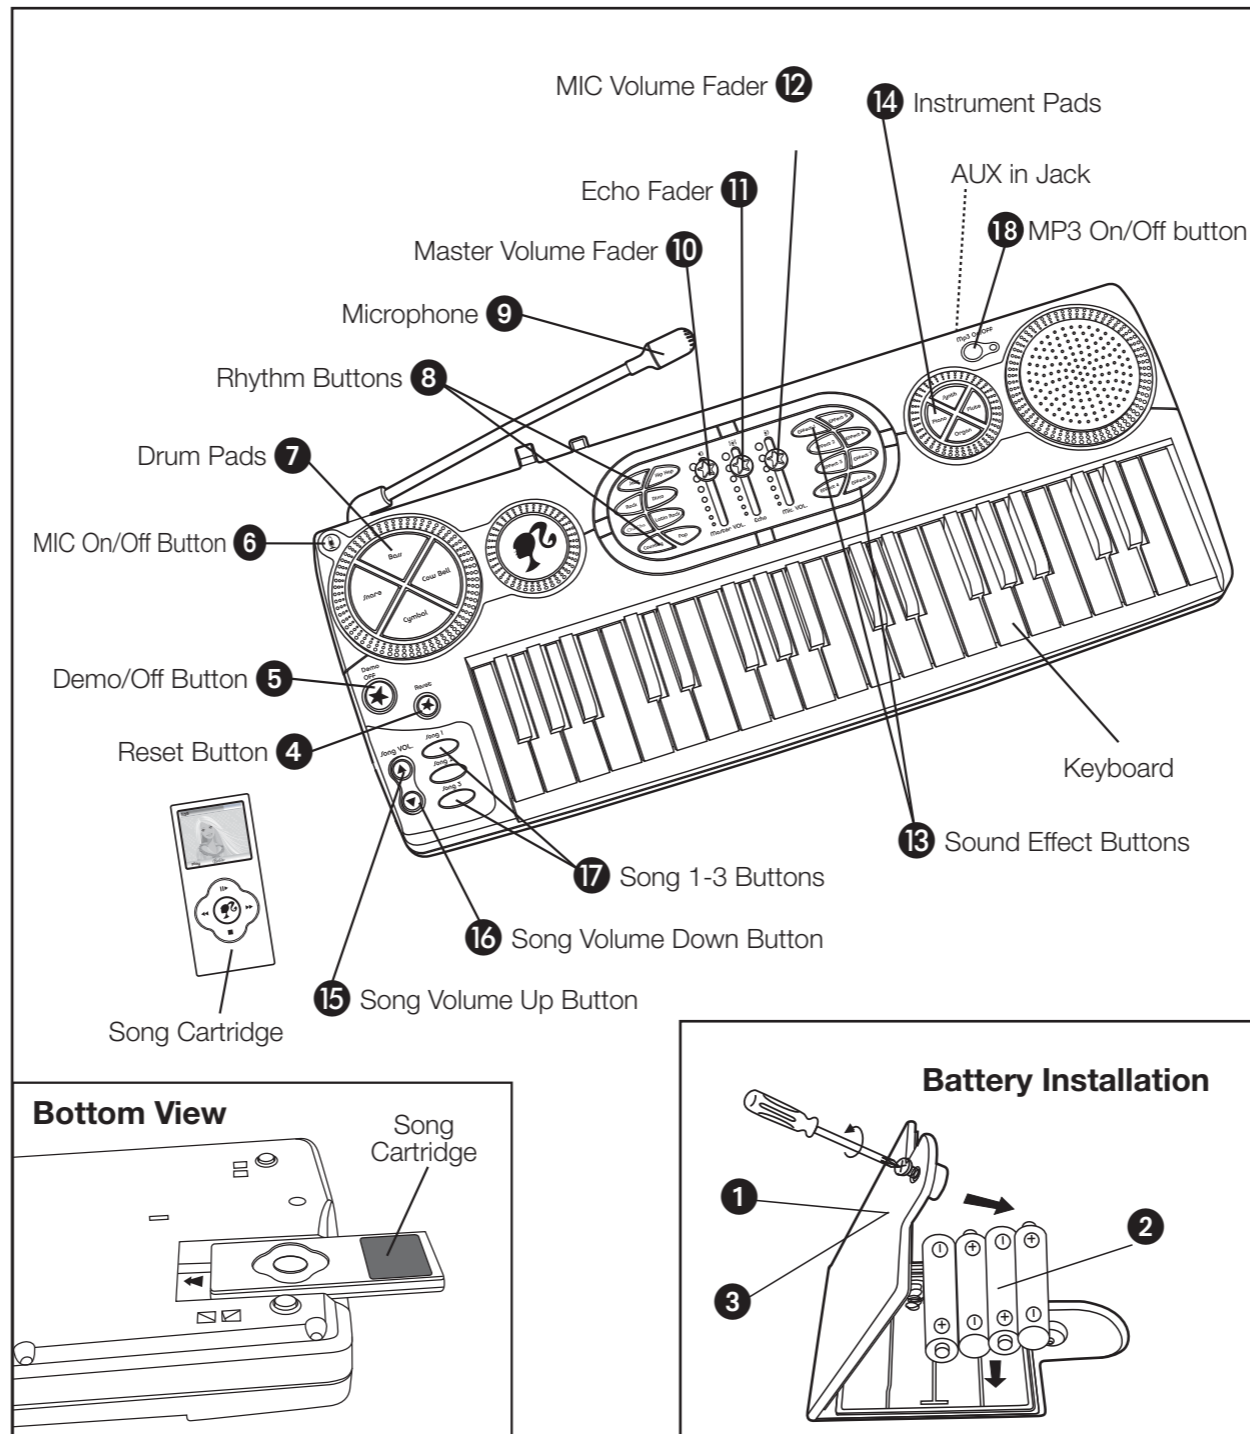

Playing with the Barbie Keyboard

The Barbie Keyboard is a fun toy that plays like a real electronic keyboard. You can create your own music, sing together with music and cool sound effects, play along with eight different rhythm tracks or sing and play along with the pop songs on the song cartridge. Read these instructions to learn how to have lots of fun with your new keyboard.

Turning the Keyboard On/Off – To turn on the Keyboard, just press any key. The unit will automatically turn off if there is no input for about 20 seconds. You can also turn it off immediately by pressing the **5 Demo/Off Button** or **4 Reset Button**; you will hear a beep tone indicating the unit is off.

Demo – When the unit is off, press the **5 Demo/Off Button** once to hear Barbie describe what the keyboard can do.

Create Music – Press keys on the keyboard to create your own music. To switch the keyboard instrument sound to Piano, Synth, Flute or Organ, press the related **14 Instrument Pad**. Press any one of the **8 Rhythm Buttons** to play that rhythm track as background music to sing and play to. There are four **7 Drum Pads** on the left hand side; press any pad to make that drum sound. Also, you can press one of the **13 Sound Effect Button** to activate cool sound effects. Use the Master Volume fader to control the overall volume. **Song Cartridge** – Insert the song cartridge (label side out) into the slot on the bottom left of the keyboard, then press **17 Song 1 - 3 key** to play a song. You can use the **15 Song Volume Up** or **16 Down Button** to adjust song loudness. When playing along to the song cartridge, the keyboard automatically plays in tune with the songs.

Microphone Function – At any time, press and hold the **6 MIC On/Off button** then begin singing into the MIC. Your voice will come out of the speaker mixed with any other sound source that is playing. Use the **12 MIC volume Fader** to adjust the microphone volume. Adjust the **11 Echo Fader** for awesome echo effect. To turn the microphone OFF, release the **6 MIC On/Off Button**. **TIP:** To avoid annoying feedback (piercing squealing sound), keep microphone volume low and mic pointed away from the speaker.

Using the AUX In Jack with your iPod® or any MP3 player

You can connect your Barbie™ Jam with Me Electronic Keyboard to an iPod® or any MP3 player to play your own music through the keyboard.

Connect your iPod® or MP3 player to Barbie™ Jam with Me Electronic Keyboard by using an audio cable (not included) from the device's headphone or audio out jack to the AUX in jack located to the right on the back panel.

Press play on your iPod® or MP3 player. Press **18 MP3 On/Off button** to play your MP3 for 10 minutes (the Keyboard will auto shut off after 10 minutes). Press again to keep playing MP3.

Adjust the overall volume using the Master Volume fader on the Keyboard